


- A. Riser Cradle (370142)
- B. Coupling Adapter (370141)
- C. Brass Diverter (300399)
- D. Face Bushing Adapter (370144)
- E. Riser Only (Sold With Add a Shower Kits)
- F. Chrome Flex Hose (300403)
- G. Hose Washers Only (300410) *2 are Needed.*
- H. Clawfoot Shower Head (300499)

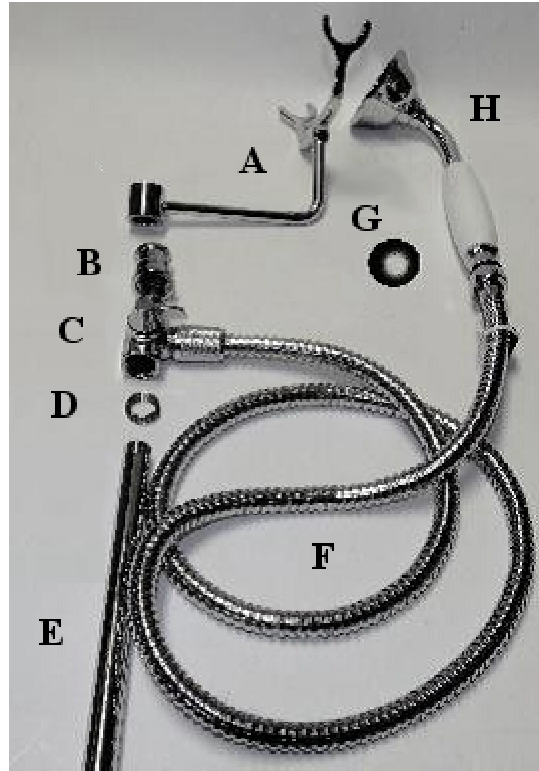

How to add a Hand Held unit to your Add a Shower

(Your current Shower fixture should have a riser (E). These instructions are for adding a hand held shower to a clawfoot tub that already has an Add a Shower)

1. Unscrew the lower Riser (E) from the upper gooseneck riser (*It is best to have a second person to hold the unscrewed section so no damage will occur.*)
2. Put Teflon tape around the Riser (E) and Face Bushing Adapter (D).
3. Thread on the Face Bushing Adapter (D). (*This adaptor has threads on both the inside and outside.*)
4. Thread Brass Diverter (C) on to the Face Bushing Adapter (D).
5. Then wrap the top of Brass Diverter (C) with Teflon tape.
6. Thread Coupling Adapter (B) onto Brass Diverter (C).
7. Slide Riser Cradle (A) onto your upper gooseneck riser.
8. Wrap the gooseneck riser threads with Teflon tape (the end that was unthreaded).
9. Thread the gooseneck riser into Coupling Adapter (B).
10. Slide Riser Cradle (A) to the desired height.
11. Tighten with an Allen wrench.
12. Take the Hose Washers (G) and place one in each of the Chrome Flex Hose(F) ends.
13. Thread Chrome Flex Hose (F) on to Brass Diverter (C).
14. Thread Clawfoot Shower Head (H) to other side of Chrome Flex Hose (F).